

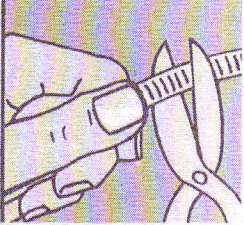
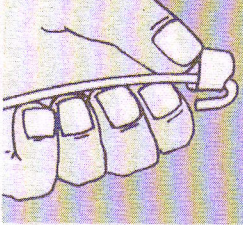
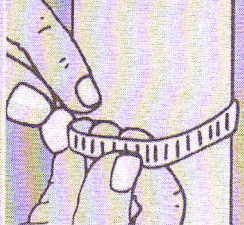
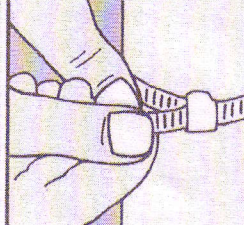


Montageanleitung A 230 + A 260


Cut to length...	...add a housing...	...fit band, insert screw...	...tighten screw...
			
Measure the strip to required length, add approximately 2" or 50mm and cut to size.	Insert one end of the band into the end of the housing and bend 1" (25mm) under.	Feed the other end of the band around the objects to be clamped or fastened, and through the slot at the rear end of the housing.	Insert the screw into the housing and tighten, using a screwdriver or Allen key.

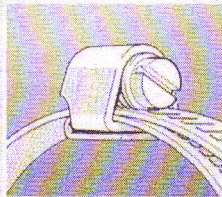


Slotted Screw
11mm Zinc plated Mild Steel
or Stainless Steel

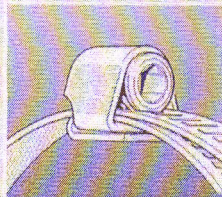

Allen Screw
11mm Zinc plated Mild Steel
or Stainless Steel

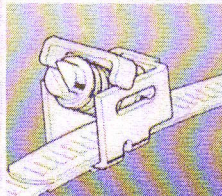

Captive Screw
11mm Zinc plated Mild Steel
or Stainless Steel

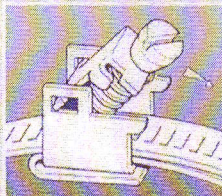

Flip-Lock Screw
7mm all Stainless Steel